


XCV 1000 – Pin Layout

Rows AJ-AN are available for input/output. Any pin with the *User IO* label (see *Package Pin Legend*) is available for use.

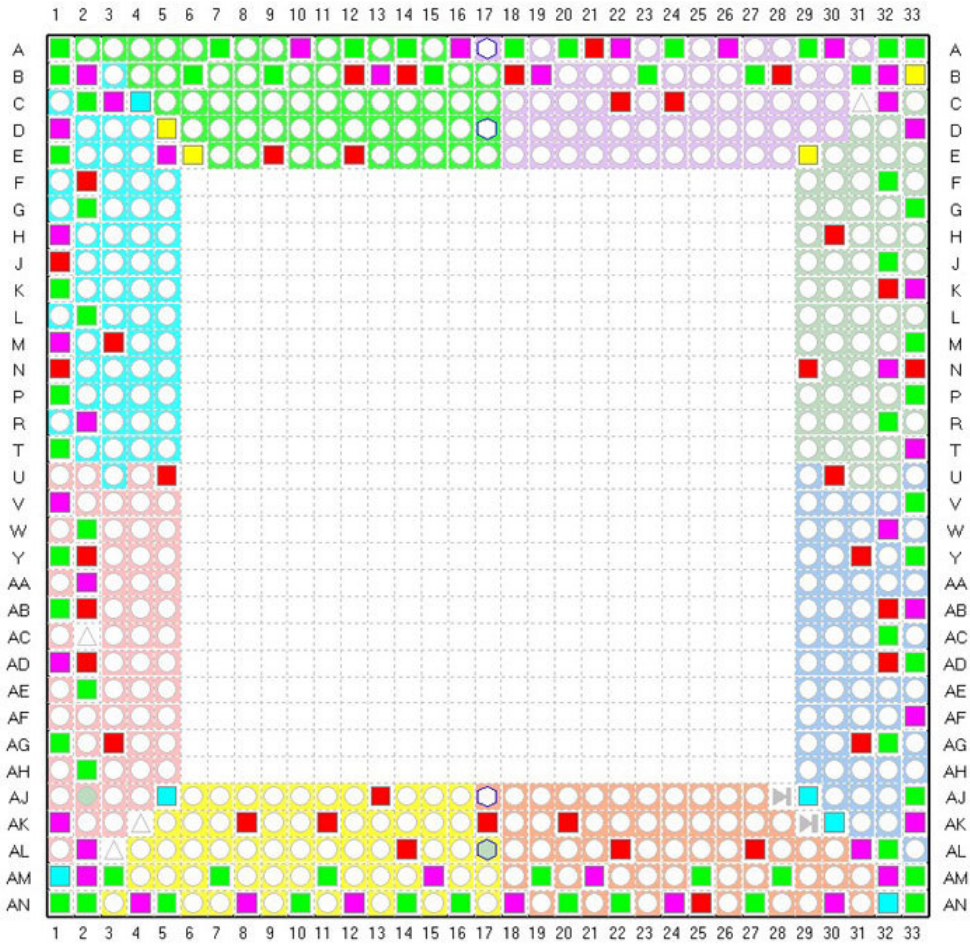

Symbol	Pin Type
○	User IO
■	User Prohibit
■	GND
■	VCCINT
■	VCCAUX
■	VCCO
■	CONFIG
■	JTAG
○	GCLK / GCK
⬆	Temperature Diode
⬆	Analog VCC
⬇	Analog GND
⚡	Power Management
⚡	VBATT
■	Gigabit Serial
★	VCC MGT Termination
○	Not Connected
■	Bank0
■	Bank1
■	Bank2
■	Bank3
■	Bank4
■	Bank5
■	Bank6
■	Bank7