


Pipeline Control unit (highly abstracted)

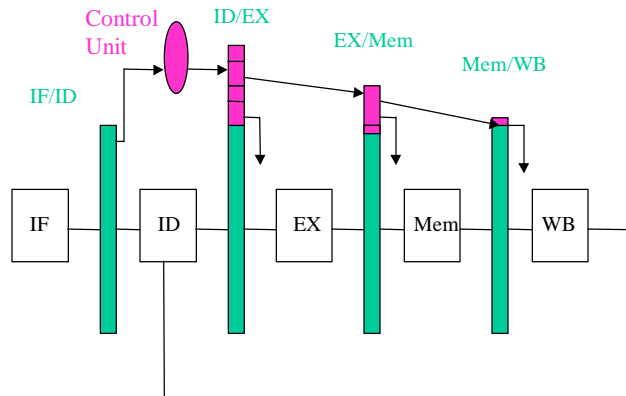

2/15/99

CSE378 Pipelining Control unit and hazards

1

Where are the control signals needed?

- Very much like in multiple cycle implementation for the case of an ideal pipeline
- Cf. Figure 6.25

2/15/99

CSE378 Pipelining Control unit and hazards

2

Control (ideal case)

- Control signals are split among the 5 stages. For the ideal case no need for additional control (but just wait!)
- *Stage 1*: nothing special to control
 - read instr. memory and increment PC asserted at each cycle
- *Stage 2*: nothing. All instructions do the same
- *Stage 3*: Instruction dependent
 - Control signals for ALU sources and ALUop
 - Control signal for Regdest so the right name is passed along
- *Stage 4*: Control for memory (read/write) and for branches
- *Stage 5*: Control for source of what to write in the destination register

2/15/99

CSE378 Pipelining Control unit and hazards

3

Hazards

- Recall
 - *structural* hazards: lack of resources (won't happen in simple pipeline)
 - *data* hazards: due to dependencies between executing instructions
 - *control* hazards: flow of control is not sequential

2/15/99

CSE378 Pipelining Control unit and hazards

4

Data dependencies

- The result of an operation is needed before it is stored back in the register file
 - Example:


add \$7, \$12, \$15	# put result in register 7
sub \$8, \$7, \$12	# use register 7 as a source
and \$9, \$14, \$7	# use register 7 as a source
 - Note that there is no dependency for register 12 which is used as a source in two operations
 - The above dependence is called RAW (Read After Write)
 - WAW (Write After Write) and WAR (Write After Read) dependencies can exist but not in our simple pipeline

2/15/99

CSE378 Pipelining Control unit and hazards

5

Data dependencies in the pipe

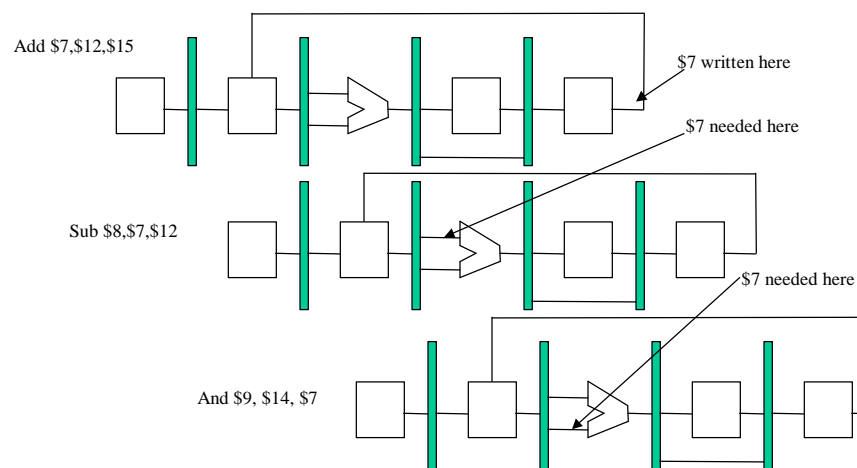

2/15/99

CSE378 Pipelining Control unit and hazards

6

Occurrences of data dependencies

- Data dependence occur when:
 - An instruction wants to read a register in stage 2, and
 - One instruction in either stage 3 or stage 4 is going to write that register
 - Note that if the instruction writing the register is in stage 5, this is fine since we can write a register and read it in the same cycle
- Data dependencies can occur between:
 - Arithmetic instructions
 - A load and an arithmetic instruction needing the result of a load
 - An arithmetic instruction and a load/store (to compute the address)
 - An arithmetic instruction and a branch (to compare registers)

2/15/99

CSE378 Pipelining Control unit and hazards

7

Detection of data dependencies

- When an instruction reaches stage 2, the control unit will detect whether the names of the result registers of the two previous instructions match the name of the source registers for the current instruction.
 - Example: EX/Mem write-register name = ID/EX rs
 - Mem/WB write-register name = ID/EX rt

2/15/99

CSE378 Pipelining Control unit and hazards

8

Resolving data dependencies


- There are several possibilities:
 - Have the compiler generate “no-ops”, i.e., instructions that do nothing while passing through the pipeline
 - Stall the pipeline when the hardware detects the dependency, i.e., create *bubbles* (the resulting delays are the same as for no-ops)
 - Forwarding the result, generated in stage 3 or stage 4, to the appropriate input of the ALU. This is called *forwarding* or *bypassing*.

2/15/99

CSE378 Pipelining Control unit and hazards

9

Example of stalls

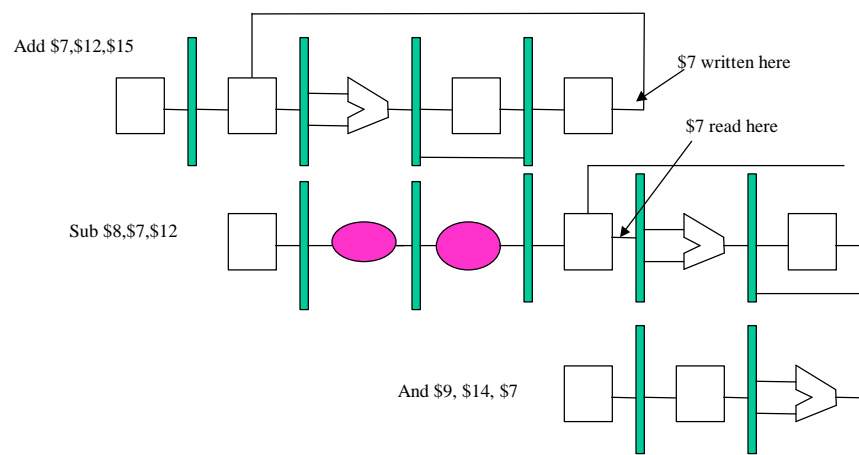

2/15/99

CSE378 Pipelining Control unit and hazards

10

How to detect stalls and additional control

- Between instruction $i+1$ and instruction i (2 bubbles)
ID/EX write-register = IF/ID read-register 1 or IF/ID read-register 2
- Between instruction $i+2$ and instruction i (1 bubble)
EX/Mem write-register = IF/ID read-register 1 or IF/ID read-register 2
- Note that we are stalling an instruction in stage 2 (decode) thus
 - We must prevent fetching new instructions (otherwise PC and current instruction would be clobbered in IF/ID)
 - so control to create bubbles (set all control lines to 0 from stage 2 on) and prevent new instruction fetches

2/15/99

CSE378 Pipelining Control unit and hazards

11

Forwarding


- Bubbles (or no-ops) are pessimistic since result is present before stage 5
 - In stage 3 for arithmetic instructions
 - In stage 4 for loads
- So why not forward directly the result from stage 3 (or 4) to the ALU
- Note that the state of the process (i.e., writing in registers) is still modified only in stage 5
 - The importance of this will become clear when we look at exceptions.

2/15/99

CSE378 Pipelining Control unit and hazards

12

Forwarding in the pipe

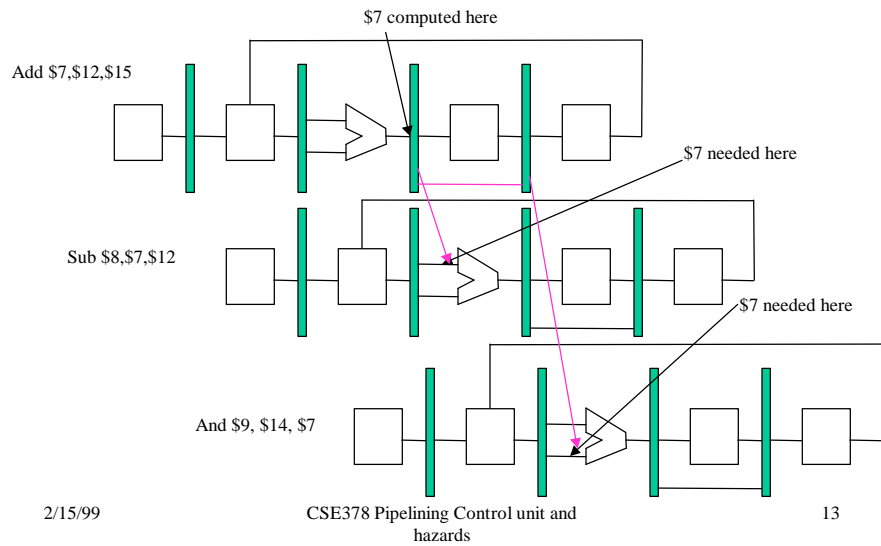

Forwarding implementation

- Add busses to the data path so that inputs to ALU can be taken from
 - register file
 - EX/Mem pipeline register
 - Mem/WB pipeline register
- Have a “control forwarding unit” that detects
 - forwarding between instructions $i+1$ and i and between instructions $i+2$ and i (note that both can happen at the same time for the two sources)
- Expand muxes to allow these new choices

2/15/99

CSE378 Pipelining Control unit and hazards

14

Still need for stalling

- Alas, we can't get rid of bubbles completely because the result of a load is only available at the end of stage 4

– Example : Lw \$6,0(\$2)

 Add \$7,\$6,\$4


 We need to stall for 1 cycle and then forward

2/15/99

CSE378 Pipelining Control unit and hazards

15

The Load stalling case

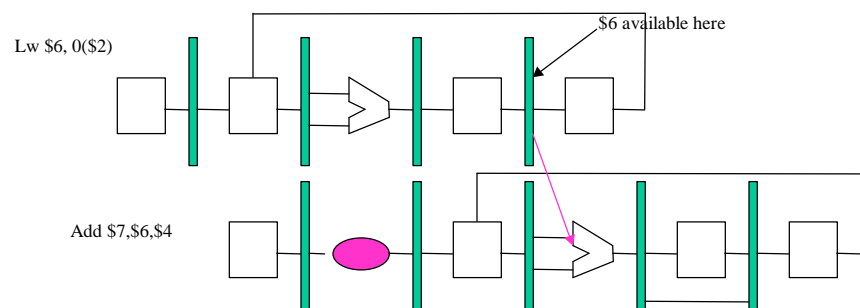

2/15/99

CSE378 Pipelining Control unit and hazards

16