Control Instructions

Do not execute the next PC value.

Transfer control to another part of the instruction space.

Two groups of instructions:

- **branches**
    - conditional transfers of control
    - the target address is close to the current PC location
        - branch distance from the incremented PC value fits into the *immediate* field
    - for example, loops, if statements
- **jumps**
    - unconditional transfers of control
    - the target address is far away from the current PC location
    - for example, subroutine calls

MIPS Branch Instructions

Branch instructions: conditional transfer of control

- **Compare** on:
  - **equality or inequality of two registers**

    Opcode rs, rt, target

    rs, rt: the registers to be compared

    target: the branch target
- **>, <, ≥, ≤ of a register & 0**

    Opcode rs, target

    rs: the register to be compared with an implicit 0

    target: the branch target
- **Branch** to a target that is a signed displacement (expressed in number of ***instructions***) from the instruction ***following*** the branch

Some examples:

```
        beq   $8, $9, Target# branch to Target if $8 == $9
        bgez  $8, Target      # branch to Target if $8 >= 0
Target:
```

MIPS Branch Instructions

`beq, bne, bgtz, bltz, bgez, blez`
are the only conditional branch opcodes

Use **`slt`** (set on less then) for >, <, >=, <= comparisons between two registers

```
slt     rd, rs, rt  # if rs < rt, rd = 1; else rt = 0
```

An example:

- branch if the first register operand is less than the second

```
slt     $8, $9, $10# $8 = 1 if $9 < $10; otherwise $8 = 0
bne     $8, $0, L1  # branch to L1 if $8 = 1
```

Can use a pseudo-instruction as a shortcut:

A "pseudo instruction" is one inserted by the assembler but is not really implemented in hardware. For example:

```
blt   $8, $10, L1       # if $9 < $10 branch to L1
```

Assembler automatically inserts:

```
slt $at, $9, $10
bne $at, $0, L1
```

Other psuedo operations: bgt, bge, ble, mult (when 3 arguments are used).

Branch Distance

Extending the displacement of a branch target address

- offset is a signed 16-bit offset
    - represents a number of **instructions**, not bytes

- added to the incremented PC

- target address is a **word** address, not a byte address
    - bottom 2 bits are zero

- in assembly language, use a symbolic target address

Why can you do this?

- each instruction is a fixed length, i.e., 4 bytes

What does it buy you?

- 4 times the branch distance

Branch Distance

Branch offset is a decent size

- 16-bit offset
- added to the incremented PC
- represents a word address

But what if it is too small to reach the branch target?

- assembler inserts an unconditional jump
- the conditional branch branches to the original false path code (condition evaluated to false) or falls through to the jump

Example:

```
        beq     $s0, $s1, L1
```

changes to:

```
        bne     $s0, $s1, L2
        j       L1
L2:     
```

the false path: the original fall through code

I-type Format for Branches

I-type format used for conditional branches

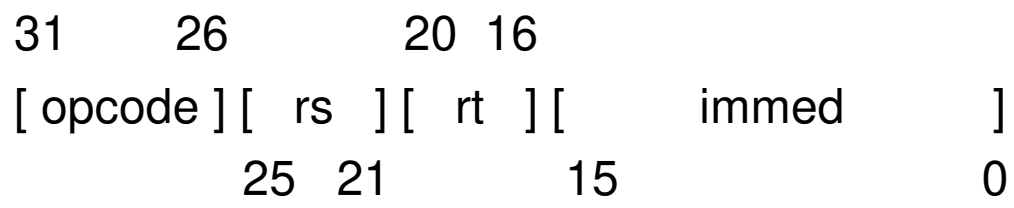

- **opcode** = operation
  - opcode = control instruction
- **rs, rt** = source operands
- **immed** = address offset in words, $\pm 2^{15}$
  - hardware sign-extends when uses (replicate msb)
  - target address = PC + (immed*4)

```
bne   $s0, $s1, Exit
[  5  ][  16  ][  17  ][  (Exit - PC+4)/4  ]
```

MIPS Jump Instructions

Jump instructions**:** unconditional transfer of control

```
j       target    # jump go to the specified target address
jr      rs        # jump register go to the address stored in rs
                  #      (called an indirect jump)
jal     target    # jump and link go to the target address;
                  # save PC+4 in $ra
jalr    rs, rd    # jump and link register go to the address store
                  # in rs; rd = PC+4, default rd is $ra
```

Examples:

`jal procedureAddress` calls a procedure

`jr $31` (or **`jr $ra`**) returns from a procedure

`jr $8` implements a case statement

- where the target addresses for the different cases are in a table (**jump address table**)
- $8 contains one such entry

J-type Format for Jumps

J-type format used for unconditional jumps

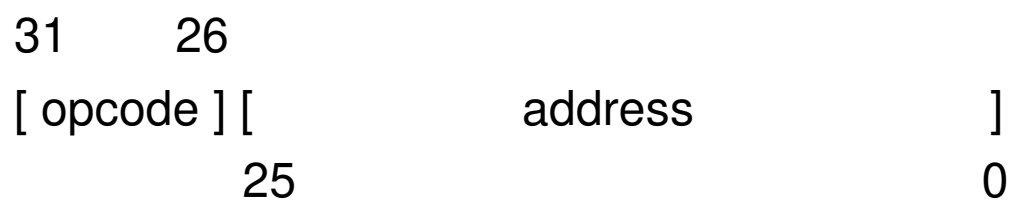

- **opcode** = operation
    - opcode = data transfer instruction
- **address** = partial address in words
    - bottom 2 bits are zero (jumping to a word/instruction boundary)
    - top 4 bits come from the PC

```
j     10000
[  2  ][              10000              ]
```

If/then/else Example

The C version

```
if (i ==j)
  f = g + h;
else f = g - h;
```

An assembly language version:

```
# i in $s3, j in $s4
# f in $s0, g in $s1, h in $s2

    bne  $s3,$s4,Else   # go to Else if i not = j
    add  $s0,$s1,$s2    # f = g + h
    j  Exit             # jump out of the if
Else:
    sub  $s0,$s1,$s2    # f = g - h
Exit:
```