What is Computer Architecture?

Architecture

- **abstraction** of the hardware for the programmer
- instruction set architecture
  - instructions:
    - operations
    - operands, addressing the operands
    - how instructions are encoded
  - storage locations for data
    - registers: how many & what they are used for
    - memory: its size & how it is accessed
  - I/O devices & how to access them
  - software conventions:
    - subroutine calls: who saves the registers, which ones are saved
    - passing parameters: in registers? on the stack?
- the **interface** between the software & hardware

What is Computer Organization?

Organization or Microarchitecture

- basic components of a computer
  - on the CPU (ALU, registers, PC, etc.)
  - memory (levels of the cache hierarchy)
- how they operate
- how they are connected together

Organization is mostly invisible to the programmer

- today some components are considered ***part of the architecture***
- why? because a programmer can get better performance if he/she knows the structure
- for example: the caches, the pipeline structure

Separate Architecture & its Organization

Why separate architecture & organization?

- many implementations for 1 architecture

  family of implementations: sequences of machines that have the same ISA

  - IBM 360/85, 360/91, 370s
  - MIPS R2000, R3000, R10000
  - Intel x86, Pentium, Pentium-Pro
  - DEC Alpha 21064, 21164, 21264

  $\Longrightarrow$ different points in the cost/performance curve

  $\Longrightarrow$ binary compatible: same software could run on all machines

  $\Longrightarrow$ open architecture: third party software

Different Architectures

So why have different architectures?

- different architecture philosophies & therefore different styles
  - support high level language operations: CISC
  - support basic primitive operations: RISC
- different application areas
  for example, multimedia instructions
- “ours is better” within the same style

Basic Architectural Design Principles

Design for the common case

common cases in hardware, uncommon cases in software

- basic floating point operations in hardware
  software function for the cosine routine
- memory access in hardware
  trap to software for a page fault

Smaller is faster

must have a good reason for adding an instruction, register, etc.

- memory hierarchy: registers, caches, main memory

Keep it simple, stupid: the KISS principle

simplicity favors regularity, regularity leads to smaller designs and shorter design time

- RISC instructions are all 32 bits

Good design demands compromise

- trade-off in instruction format between
  - the size of the register file (how many bits are needed to specify a register) &
  - the number of operations (how many bits are needed to specify an instruction)
- trade-off between register size & cycle time

Assembly Language

Symbolic form of computer machine language

- advantages for us
  - learn at the machine level what a computer does
  - thorough understanding through a hands-on experience
- where assembly language is used in practice
  - things that aren't expressible in a high-level language
    for example, subroutine linkage
  - privileged tasks
    for example, programs that need access to protected registers (I/O)
  - size-critical applications
    for example, programs for embedded processors
  - time-critical applications
    for example, real-time applications, OpenGL library
- why assembly language is not widely used
  - lower programmer productivity
    for example, longer coding time, more debugging
  - compilers can produce almost the same quality code
  - not portable across architectures

Still Lower

Implementation

- design of organizational components or microarchitecture

Technology

- semiconductor material
  for example, silicon
- circuit technology (how build gates from transistors)
  for example, CMOS
- packaging
  for example, pin-grid array
- generation
  for example, vacuum tubes, VLSI
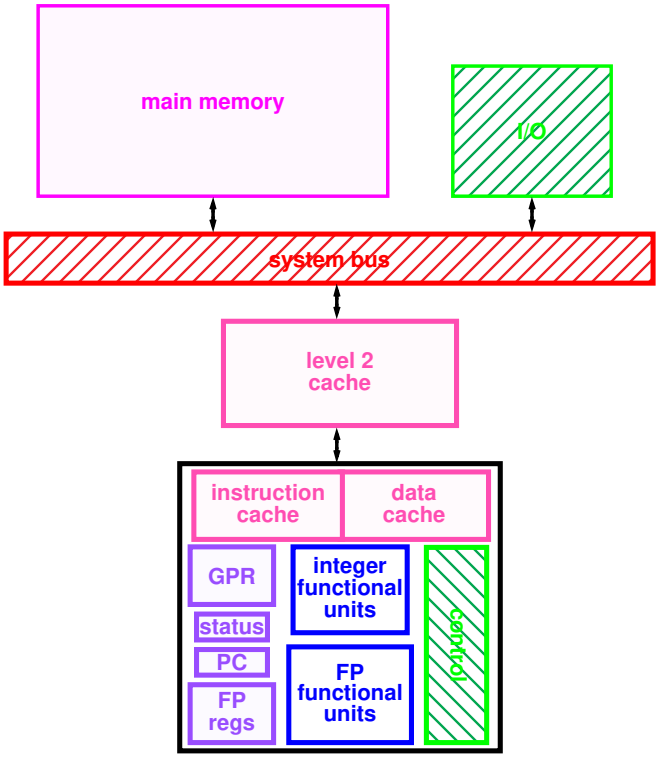
A Simplified Machine Model