Control Instructions

Do not execute the next PC value.

Transfer control to another part of the instruction space.

Two groups of instructions:

- **branches**
  - conditional transfers of control
  - the target address is close to the current PC location
    - branch distance from the incremented PC value fits into the *immediate* field
  - for example, loops, if statements
- **jumps**
  - unconditional transfers of control
  - the target address is far away from the current PC location
  - for example, subroutine calls

MIPS Branch Instructions

Branch instructions: conditional transfer of control

- **Compare** on:
  - **equality or inequality of two registers**

    Opcode rs, rt, target

    rs, rt: the registers to be compared

    target: the branch target
  - **>, <, ≥, ≤ of a register & 0**

    Opcode rs, target

    rs: the register to be compared with an implicit 0

    target: the branch target
- **Branch** to a target that is a signed displacement (expressed in number of ***instructions***) from the instruction ***following*** the branch

Some examples:

```
        beq $8, $9, Target      # branch to Target if $8 == $9
        bgez $8, Target         # branch to Target if $8 ≥ 0
Target:
```

MIPS Branch Instructions

`beq, bne, bgtz, bltz, bgez, blez`
are the only conditional branch instructions

Use **`slt`** (set on less then) for >, <, ≥, ≤ comparisons between two registers

```
slt   rd, rs, rt        # if rs < rt, rd = 1; else rt = 0
```

An example:

- branch if the first register operand is less than the second

```
slt $8, $9, $10     # $8 = 1 if $9 < $10; otherwise $8 = 0
bne $8, $0, L1      # branch to L1 if $9 < $10
```

Can use a **pseudoinstruction** as a shortcut:

- an instruction provided by the assembler but not implemented in the hardware
- `blt $9, $10, L1` # pseudoinstruction for branch to L1 if $9 < $10

  assembler expands to:
  ```
  slt $at, $9, $10
  bne $at, $0, L1
  ```
  (note the use of $at ($1) by the assembler)

  also **`bgt, bge, ble`**

Branch Distance

Extending the displacement of a branch target address

- offset is a signed 16-bit offset
  - represents a number of **instructions**, not bytes
- added to the incremented PC
- target address is a **word** address, not a byte address
  - bottom 2 bits are zero
- in assembly language, use a symbolic target address

Why can you do this?

- each instruction is a fixed length, i.e., 4 bytes

What does it buy you?

- 4 times the branch distance

Branch Distance

Branch offset is a decent size

- 16-bit offset
- added to the incremented PC
- represents a word address

But what if it is too small to reach the branch target?

- assembler inserts an unconditional jump
- the conditional branch branches to the original false path code (condition evaluated to false) or falls through to the jump

Example:

```
        beq     $s0, $s1, L1
```

changes to:

```
        bne     $s0, $s1, L2
        j       L1
L2:     the false path: the original fall through code
```


I-type Format for Branches

I-type format used for conditional branches

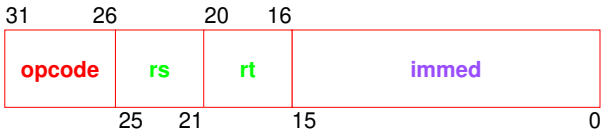

- **opcode** = operation
  - opcode = control instruction
- **rs, rt** = source operands
- **immed** = address offset in words, $\pm 2^{15}$
  - hardware sign-extends when uses (replicate msb)
  - target address = PC + (immed*4)

```
bne $s0, $s1, Exit
```

5	16	17	(Exit - PC+4) / 4

MIPS Jump Instructions

Jump instructions**:** unconditional transfer of control

`j`	target	# jump go to the specified target address
`jr`	rs	# jump register go to the address stored in rs (called an **indirect jump**)
`jal`	target	# jump and link go to the target address; save PC+4 in $ra
`jalr`	rs, rd	# jump and link register go to the address stored in rs; rd = PC+4 default rd is $ra

Examples:

`jal procedureAddress` calls a procedure

`jr $31` (or `jr $ra`) returns from a procedure

`jr $8` implements a case statement

- where the target addresses for the different cases are in a table (**jump address table**)
- $8 contains one such entry

I-type Format for Jumps

J-type format used for unconditional jumps



- **opcode** = operation
  - opcode = data transfer instruction
- **address** = partial address in words
  - bottom 2 bits are zero (jumping to a word/instruction boundary)
  - top 4 bits come from the PC

`j 10000`



If/then/else Example

The C version

```
if (i ==j)
    f = g + h;
else f = g - h;
```

An assembly language version:

i in $s3, **j** in $s4

f in $s0, **g** in $s1, **h** in $s2

```
        bne     $s3,$s4,Else      # go to Else if i not = j
        add     $s0,$s1,$s2# f = g + h
        j       Exit# jump out of the if
Else:   sub     $s0,$s1,$s2# f = g - h
Exit:
```